

Installation instructions for PZ4AL-2793-00, PZ4AL-2794-00
Under Run Protective Shield Fuel Tank

TOYOTA RAV4



LEXUS NX



Model year:

RAV4 - 2012 - 2015 -

NX

2014

Applicability:

ZSA44L-ANFXK; ZSA44L-ANXXK
ZSA44L-ANXGK; ZSA44L-ANYXKX
ZSA44L-ANYMKX; ALA49L-ANTGXX
ASA44L-ANTGKX; ASA44L-ANTMKX
ALA49L-ANTMXX; ZSA42L-ANYXKX
ZSA44L-ANFMKX; ZSA42L-ANYMKX
ZSA42L-ANFXKX; ALA49L-ANTGYW

all sfx
except NX300h

Part Number:

Steel: PZ4AL-2793-00
Aluminium: PZ4AL-2794-00



Weight:

Steel: 14.10 kg
Aluminium: 10.09 kg



 
Installation Time:

30 min

Rev.1 12.10.2015


PZ4AL-02793-00, PZ4AL-02794-00

A

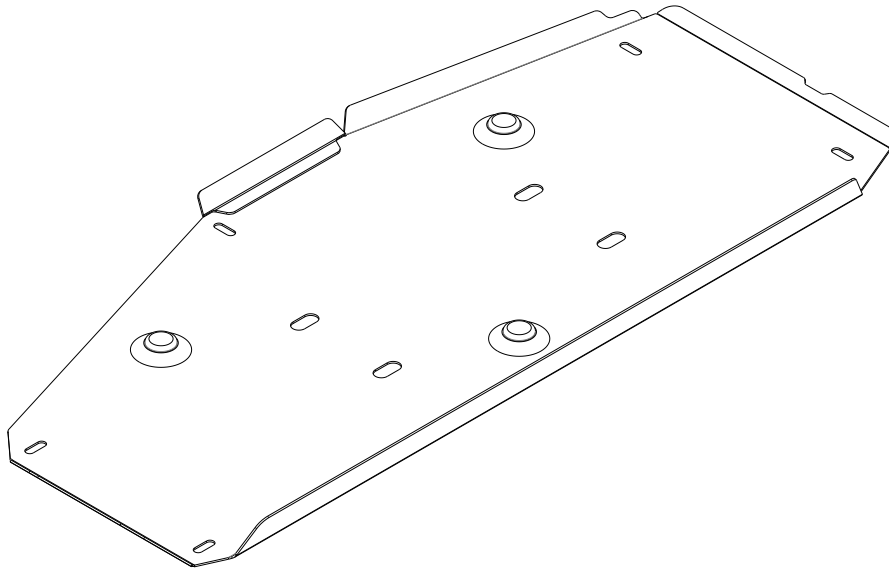

PZ4AL-02793-60

 B




1x

C




1x

 D

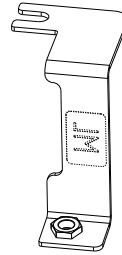


1x

 E

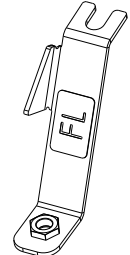


1x

 F



1x

 G

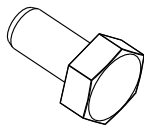

M10x30

5x

 
H



d=10

5x


I

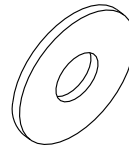

d=10


5x

 J

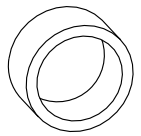

h=10

 
1x

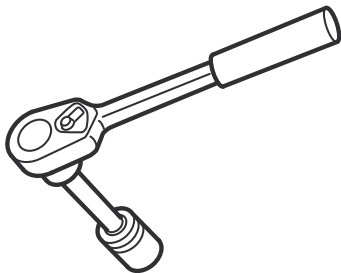



17 mm



   
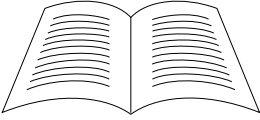 
1

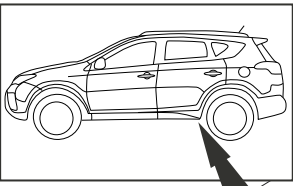


FWD

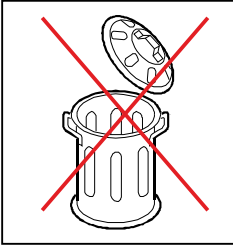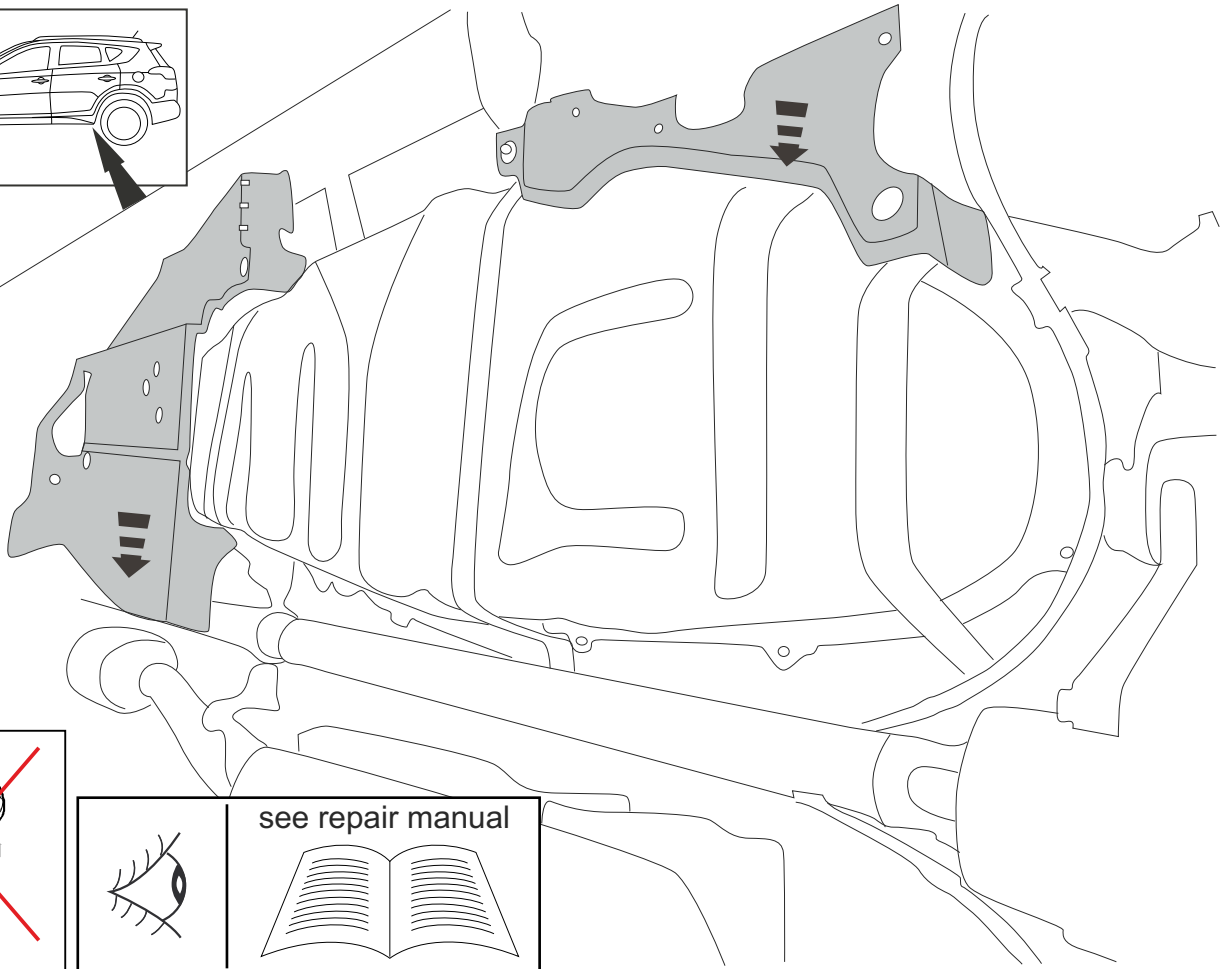


see repair manual



 
2

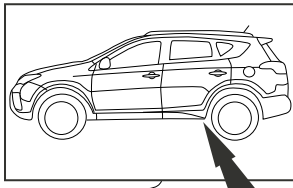

FWD

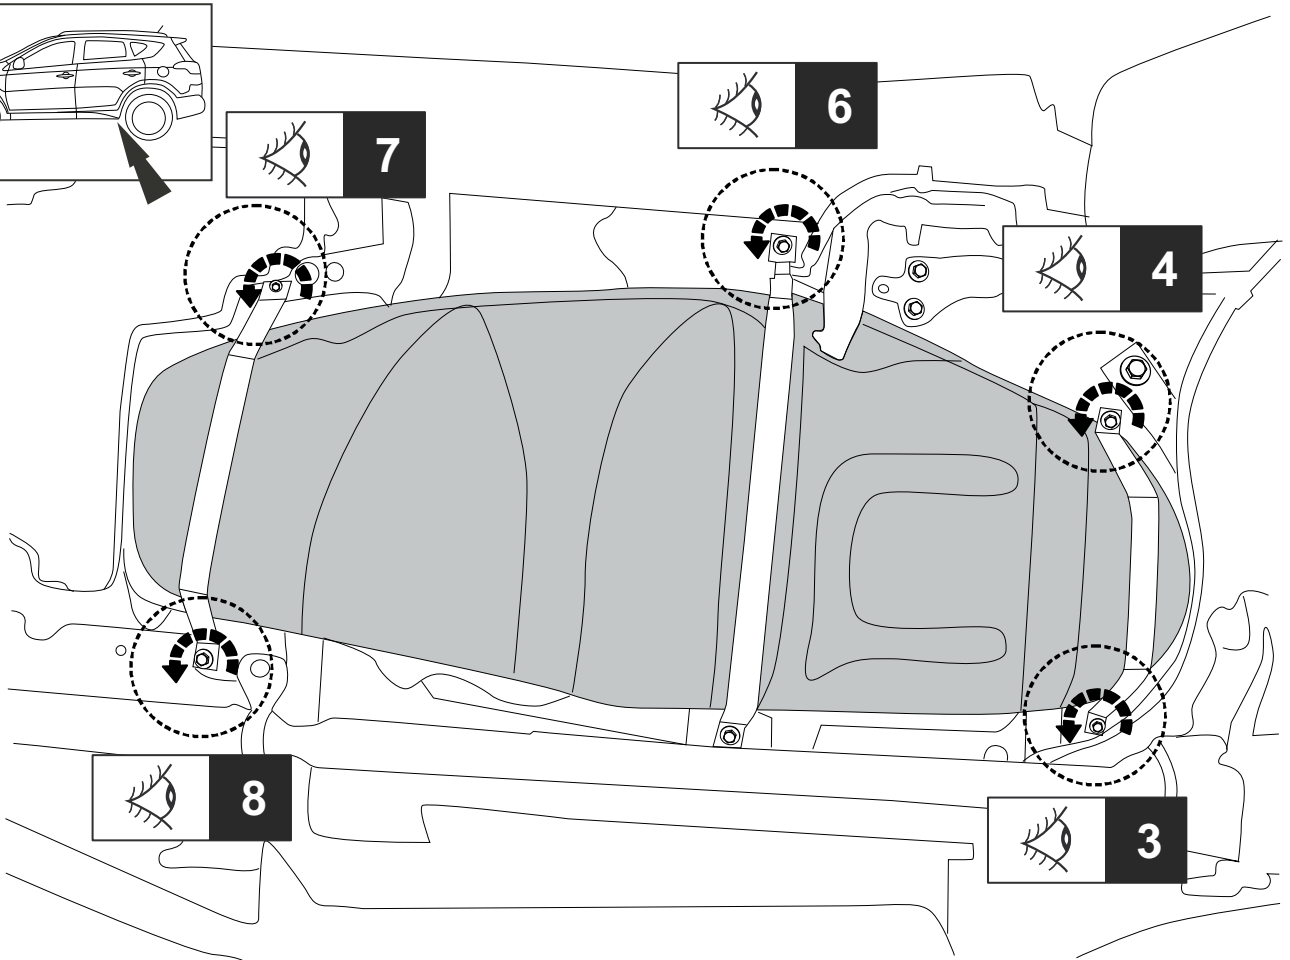 

3

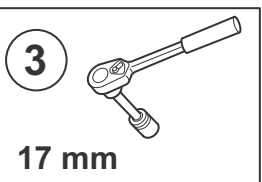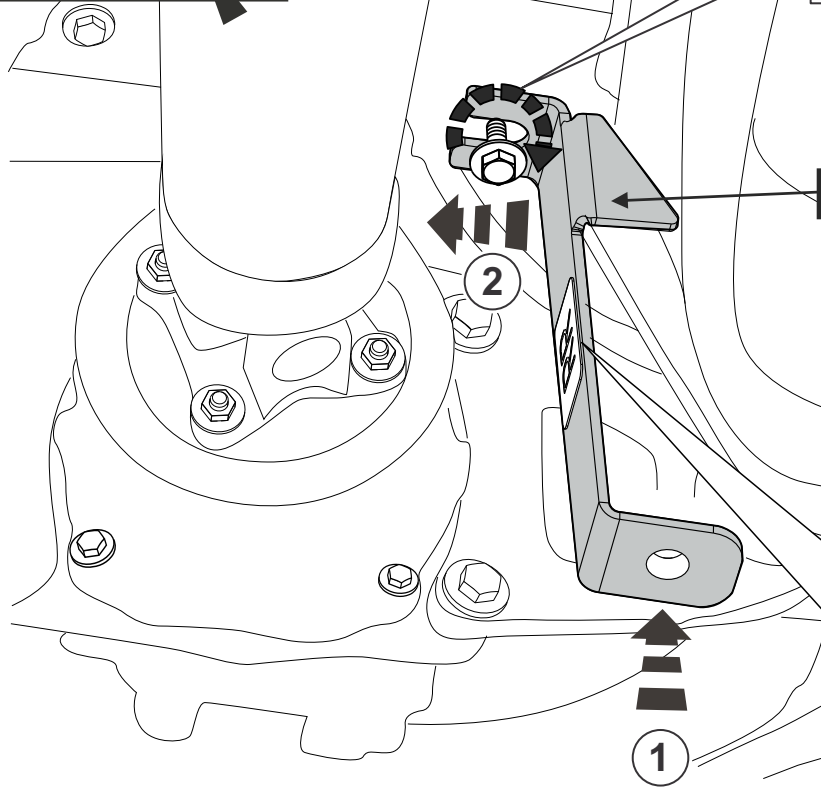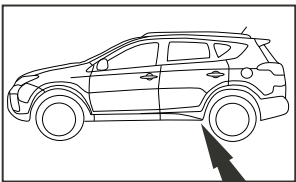   

3

17 mm

 
 
 


4

45 Nm



4

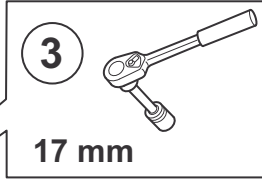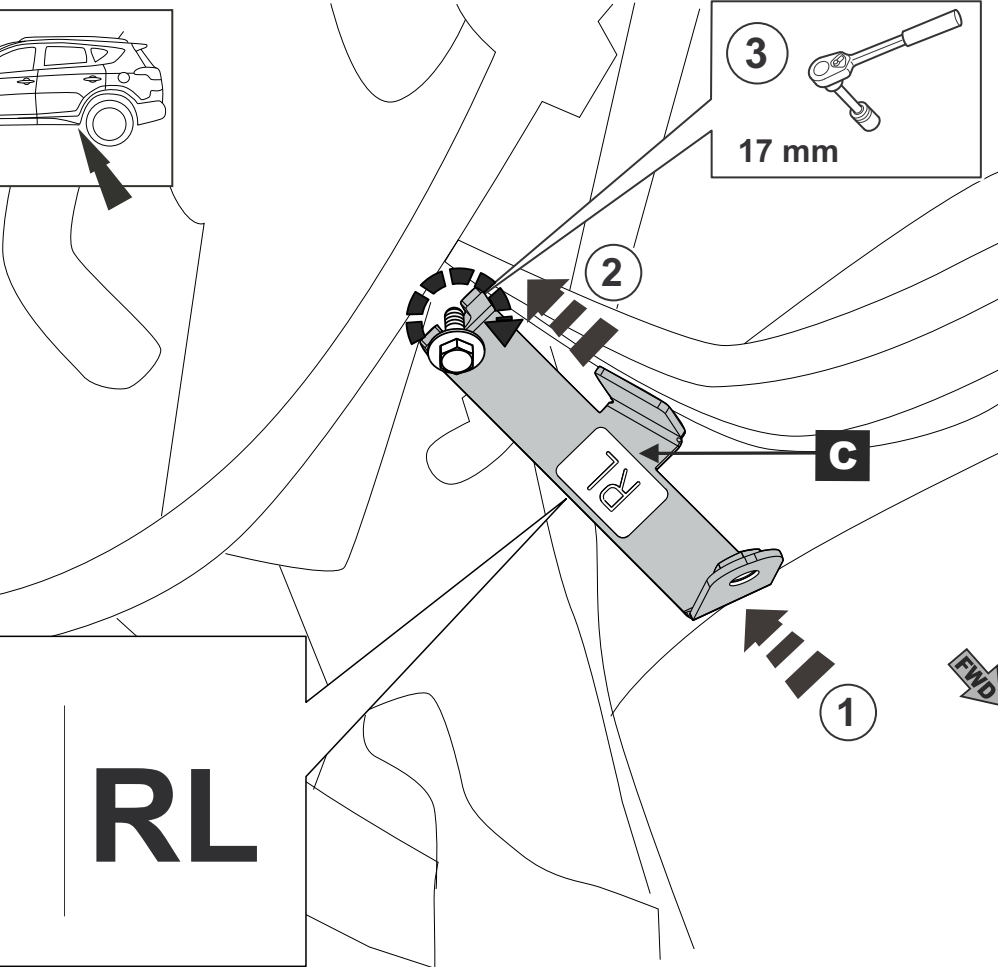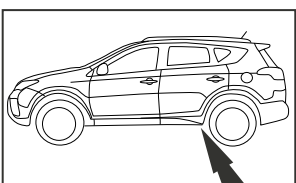

3

17 mm

 


4


45 Nm




5

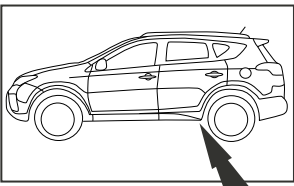



FWD

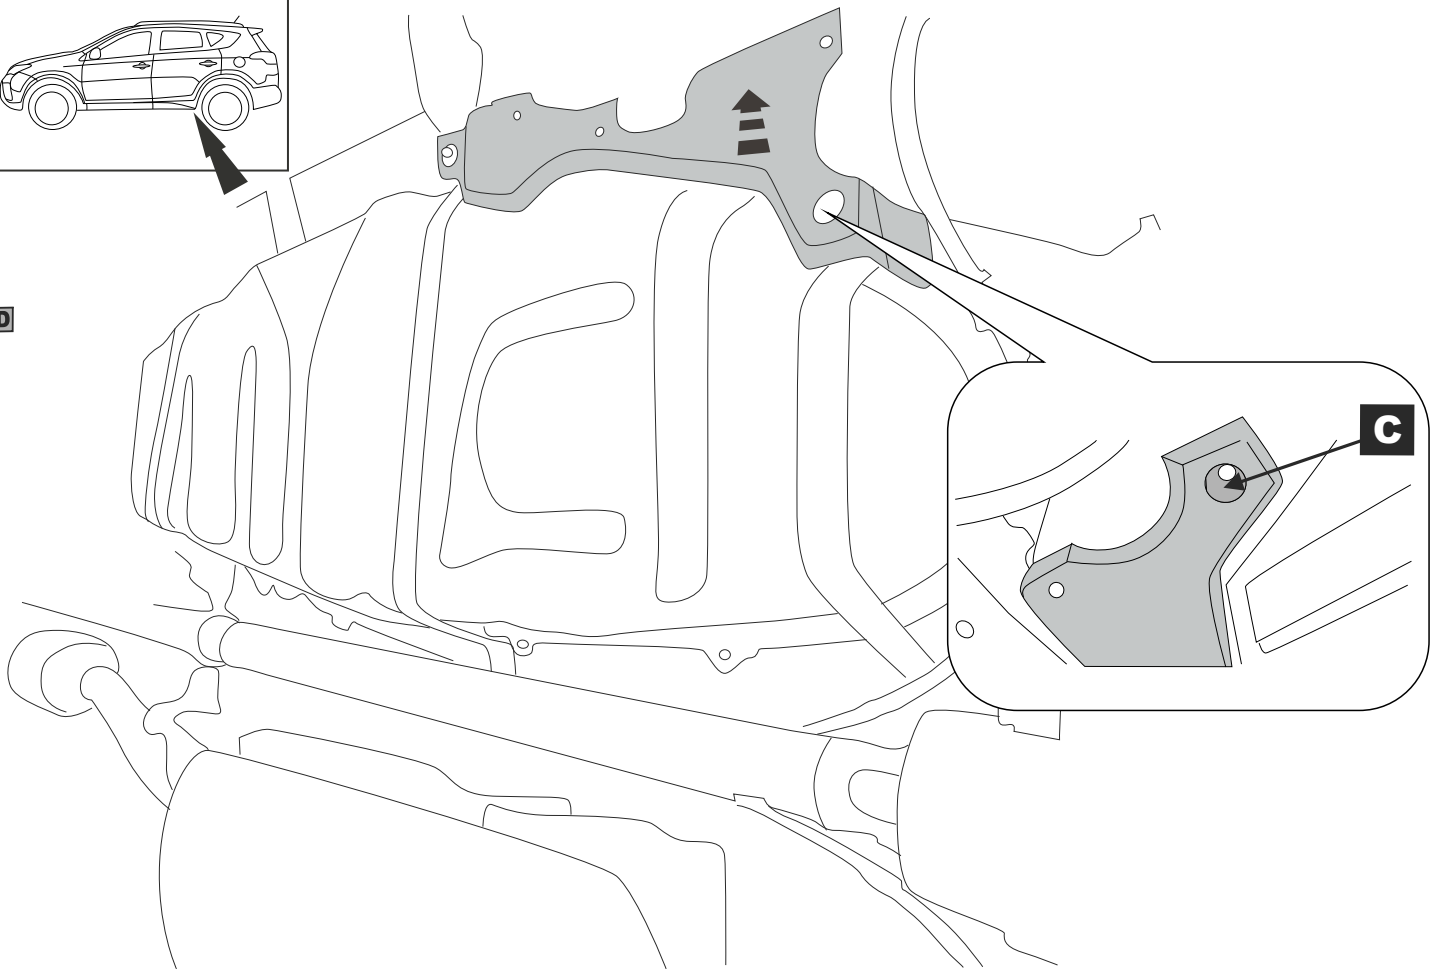 


6

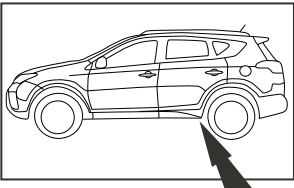 

FWD

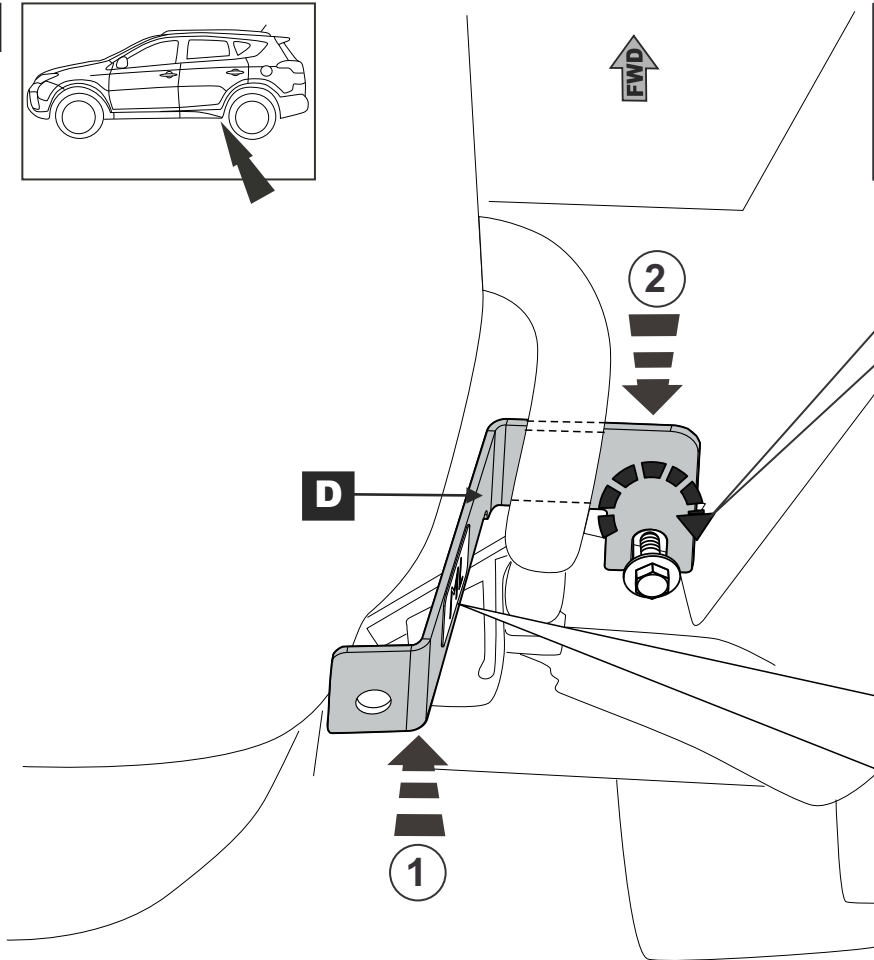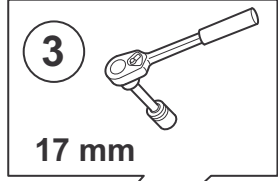  


7

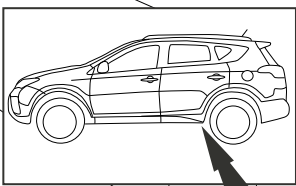 


3

 17 mm

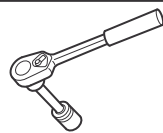

4

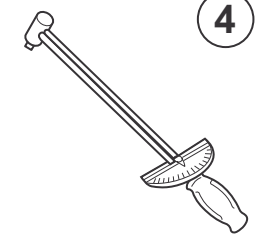 

45 Nm

2



 
1



E




8

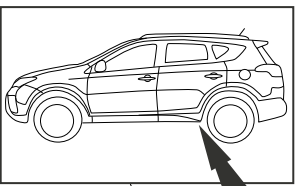

3

 17 mm

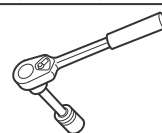

4



45 Nm

2



FWD



 
1



F




9

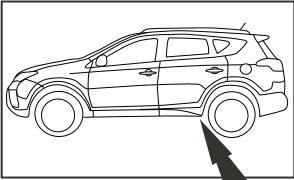


FWD



 
see repair manual

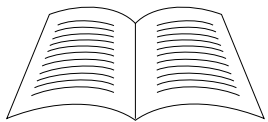



10

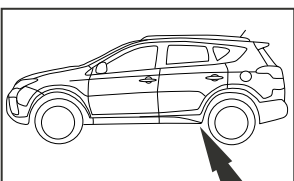 

FWD

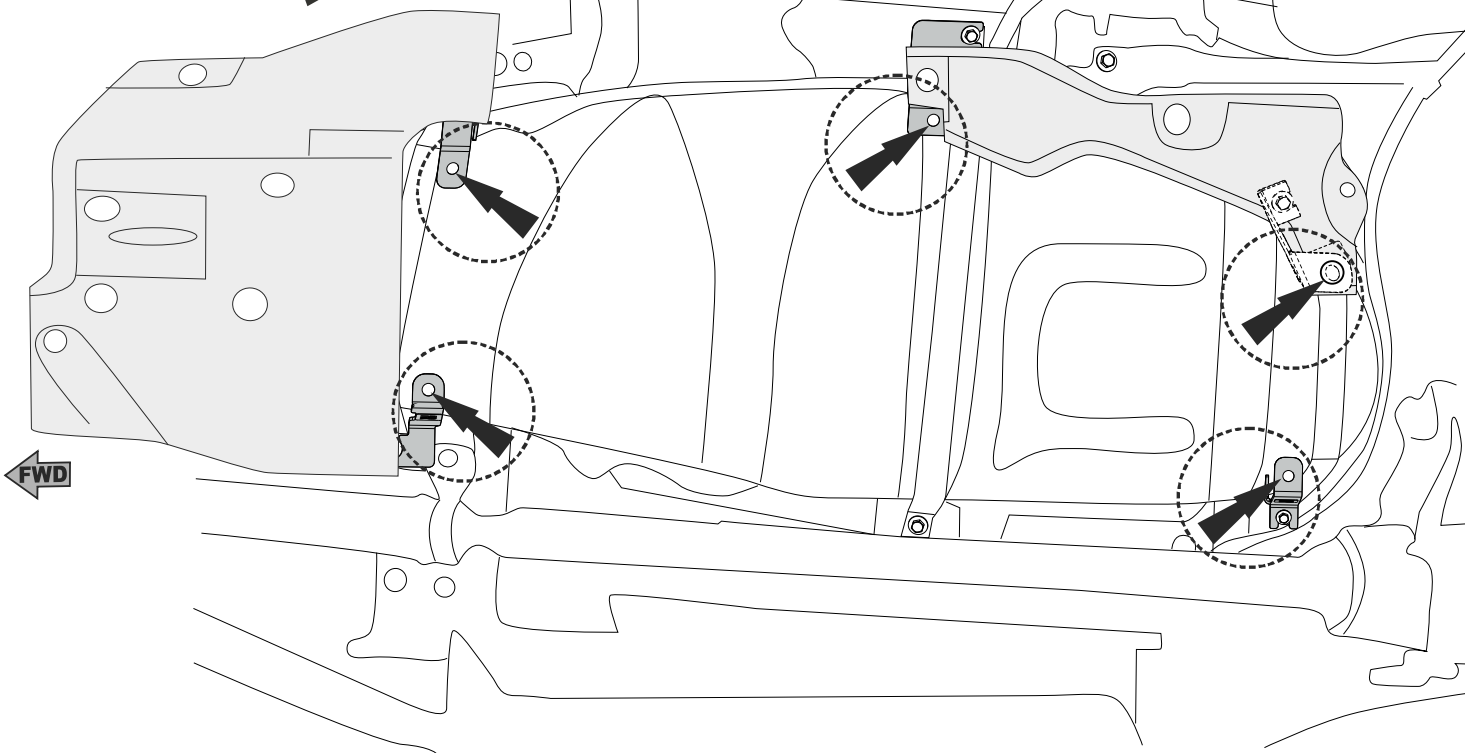 



11

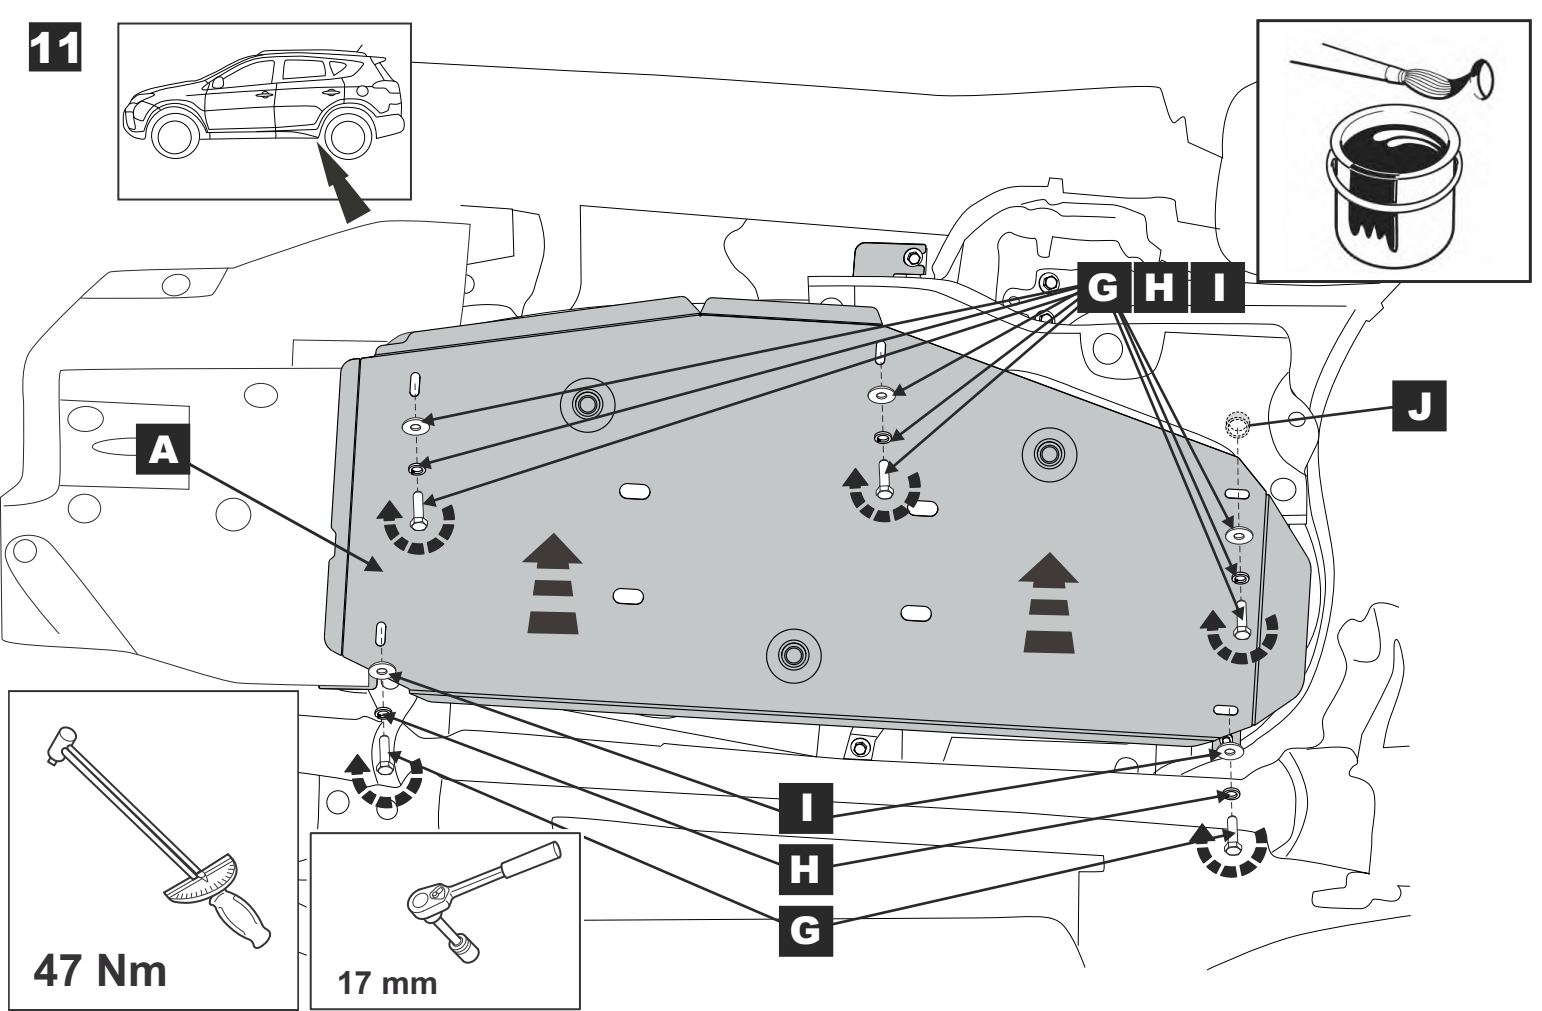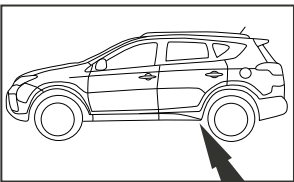  

47 Nm

17 mm

  12

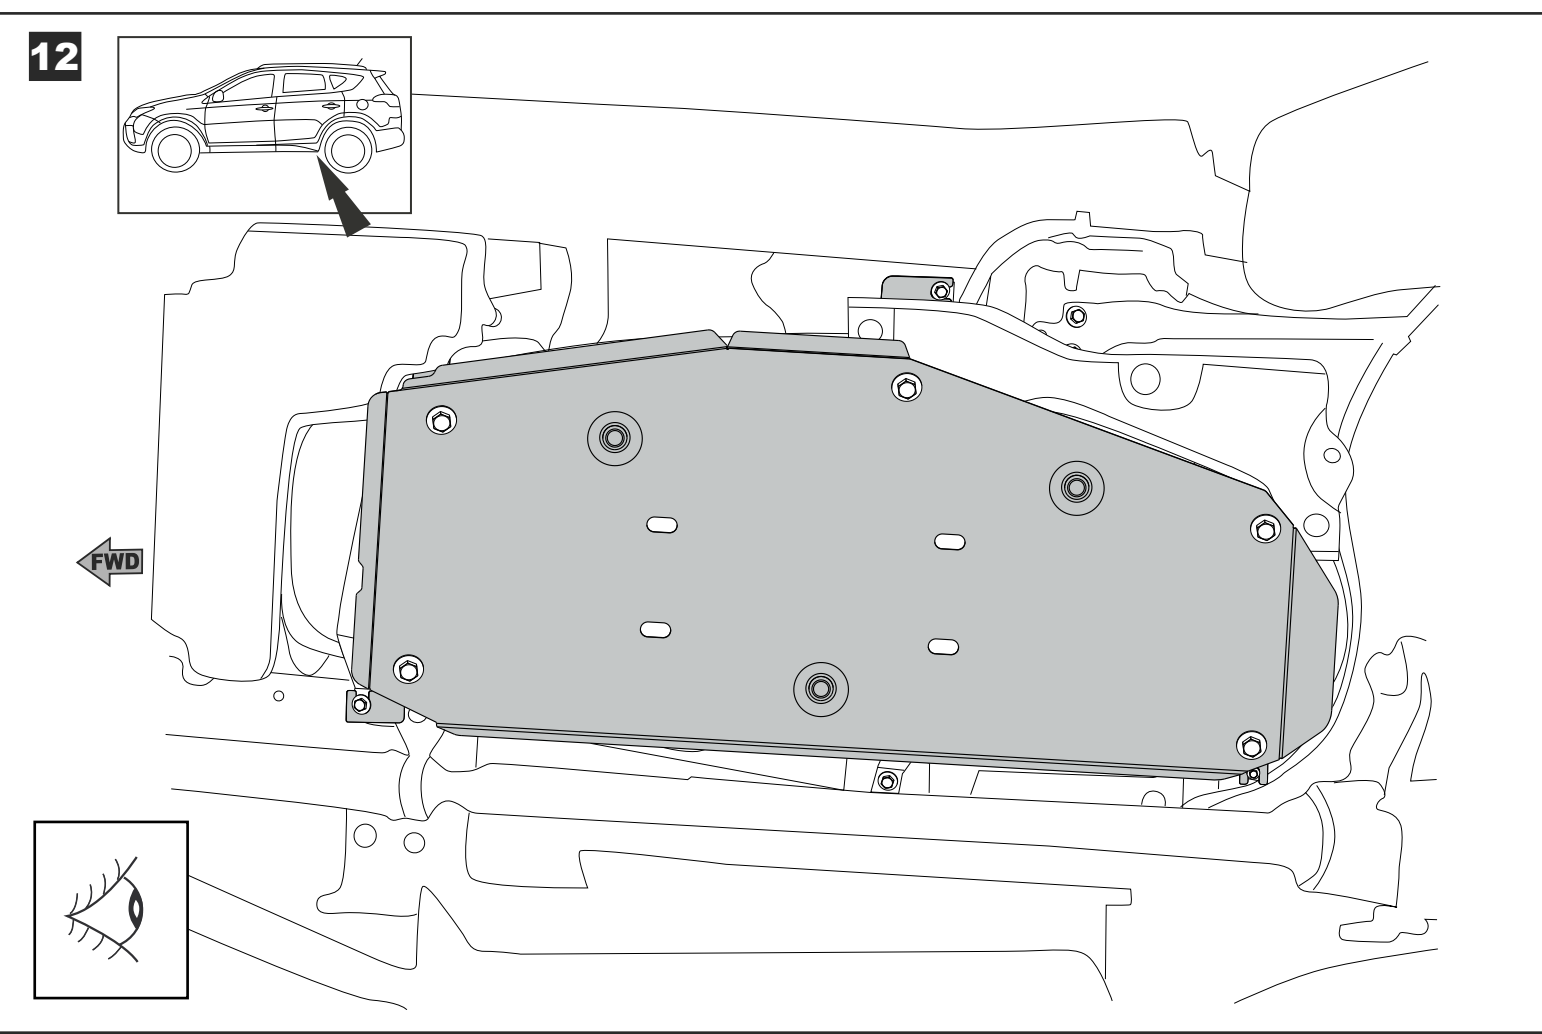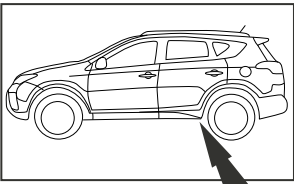

FWD

